

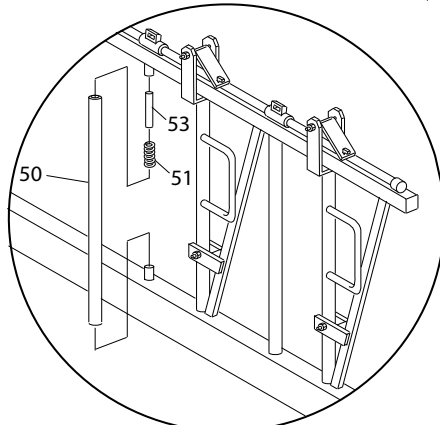




525E

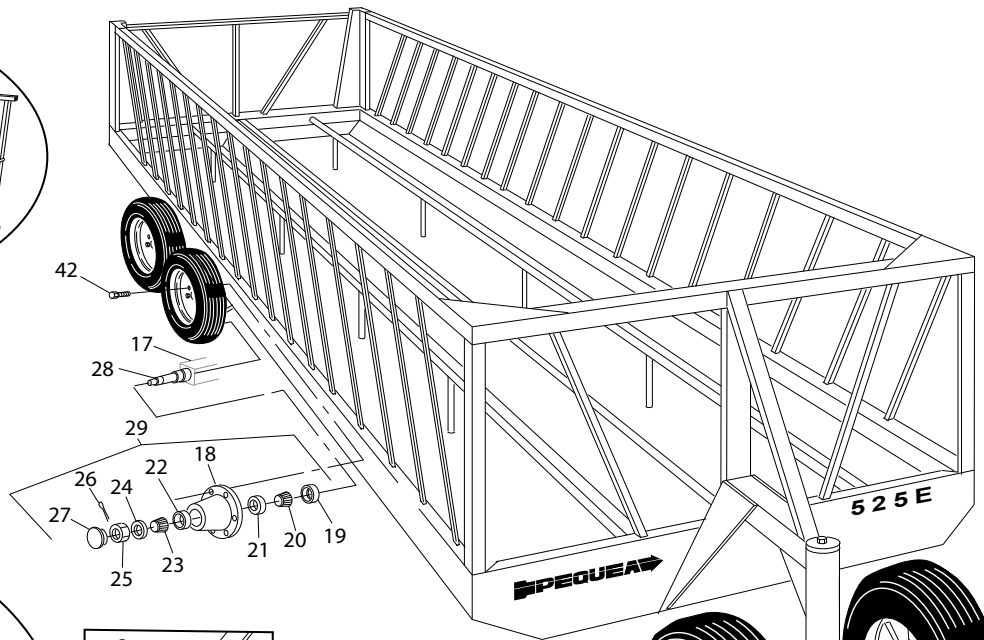

525H

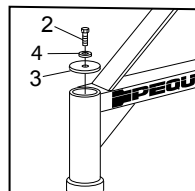

\* Not Shown

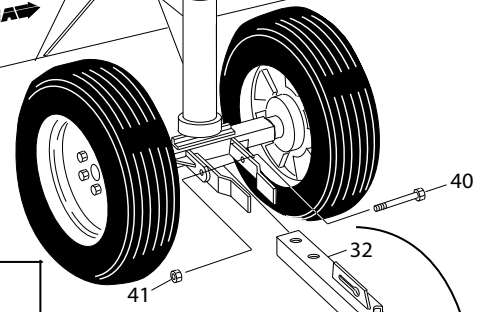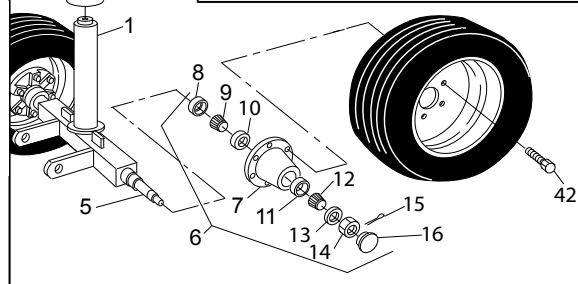

\*34-37

\*43  
\*44  
45

33  
38  
31

### Feeder Parts List

Ref#	Description	520	525	530
1	Front Dolly Assembly		300588	
2	Bolt, 1/2 x 1-1/4		000420	
3	Dolly Washer		300546	
4	Lock Washer, 1/2		000840	
5	Front Spindle Only		300510	
6	Front Hub Complete		300122	
7	Front Hub Only		300033	

Ref#	Description	520	525	530
8	Grease Seal		300030	
9	Inner Bearing		300031	
10	Inner Race		300032	
11	Outer Race		300034	
12	Outer Bearing		300035	
13	Spindle Washer		300283	
14	Spindle Nut		300281	
15	Cotter Pin, 5/32 x 1-3/4		300282	
16	Dust Cap		300036	
17	Rear Axle w/ Spindles	302041	302117	302041
18	Rear Hub Only	300033	300177	300033
19	Grease Seal	300030	300174	300030
20	Inner Bearing	300031	300175	300031
21	Inner Race	300032	300176	300032
22	Outer Race	300034	300178	300034
23	Outer Bearing	300035	300179	300035
24	Spindle Washer		300283	
25	Spindle Nut		300281	
26	Cotter Pin, 5/32 x 1-3/4		300282	
27	Dust Cap		300036	
28	Rear Spindle Only	300146	300196	300146
29	Rear Hub Complete	300122	300173	300122
30	Adj. Tongue Complete		300563	
31	Adj. Tongue Front Half		300564	
32	Adj. Tongue, Rear Half		300568	
33	Tongue Latch		300401	
34	Spring Plate		300405	
35	Nut, 5/16		000910	
36	Bolt, 5/16 x 3/4 Truss Head		000210	
37	Lock Washer, 5/16		000810	
38	Hitch Pin		300406	
40	Tongue Bolt, 3/4"x 8-1/2"		000780	
41	Tongue Nut, 3/4"		000975	
42	Lug Bolt, 1/2"		300037	
43	Stop Block		300408	
44	Lock Washer, 5/8		000860	
45	Bolt, 5/8 x 1-1/2		000610	
46	End Gate		302021	
47	Gate Hinge Pin		302027	
48	Cotter Pin,		400406	
49	Hair Pin Clip		100216	
50	Adjustable Pipe		302103	
51	Spring		302105	
53	Spring Tube		302106	
54	Grease Zerk		400117	